

## DISABLE SEAT BELT WARNING



Our ignition key hole has 4 detents.  
In clockwise direction (see figure above)  
0 - LOCK  
I - ACC  
II - ON  
III - START

1. Insert key and turn to ON (II), then press the ODO button and hold. Make sure you see the ODO and not the trip A or trip B.
2. Pull out the key completely from the lock and then release the ODO button.
3. Insert key and turn to ON (II) and then press the ODO button > 10 seconds.
4. While pressing the ODO button with the left hand, use right hand to insert the seat belt buckle.
5. The b-on/b-off will appear. Press and release the ODO button to select the desired function. Then take your left hand off the ODO button.
6. Pull out the key completely from the lock and un-buckle the seat belt.
7. Process complete